



**User Manual** 



## Table of contents

1.	Introduction	∠
2.	Service	4
3.	Warranty	Z
4.	Functions and use	
	Working environment	
	Main technical parameter	
	Features	
	Unpacking	
	Installation	
10.	Structure	
	Driving system of front window	
	UV lamp	
	Fluorescent light	
11.	Control panel	8
	. Display	
	Clock adjustment	
13.	. Airflow	10
	Water proof socket	10
	Fuse protector	10
14.	. Operation instruction	10
	Operation notice	10
	Operation process	10
15.	. Maintenance	1
	Clean the surface of working zone	
	Clean the external surface and front window	
	Overall maintenance period	
	Daily or weekly maintenance	
	Monthly maintenance	
	Common failures and solutions	
16	. Notes	
	. Content package	
12	Circuit diagram	1/1

## 1. Introduction

Thank you for purchasing the vertical laminar flow cabinet FagronLab™ LF-1300 UV. This vertical laminar flow cabinet is a positive pressure workbench and it is specially designed for compounding pharmacies and labs. It creates a particle--free working environment by taking air through a filtration system and exhausting it across a work surface in a laminar or unidirectional air stream. This is enclosed on the sides and kept under constant positive pressure in order to prevent the infiltration of contaminated room air. You must carefully read and understand the contents of this manual prior to operating this device. After reading this manual, please put it in an appropriate position for easy access.

## 2. Service

In case of any problem, you can always contact the Service Department for technical support. Please provide the customer care representative with the following information:


- Description of problem (i.e., hardware or software).
- Methods and procedures adopted to resolve the problems.
- Your contact information.

## 3. Warranty

This device is under warranty and free from defects in materials and workmanship, under normal use and service, for a period of 12 months from the date of invoice (excluding consumable accessories, UV and LED lamp, fuse, filters). The warranty is extended only to the original purchaser. Warranty is not valid on device which has been damaged on account of improper installation, improper connections, misuse, accident or abnormal conditions of operation. If the warranty has been expired, Fagron would still responsible for repair with relative charges.

For claims under the warranty please contact your local supplier.

## 4. Functions and use

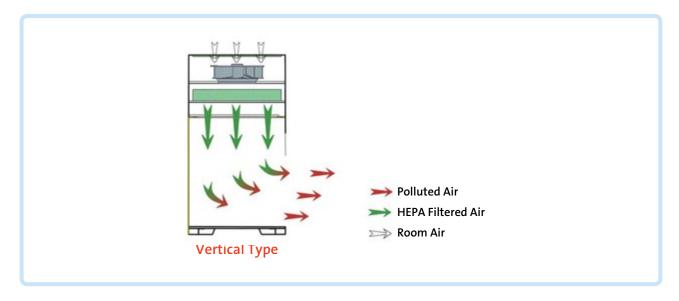

Laminar flow cabinet LF-1300 UV creates a local high cleanliness air environment by vertical air flow. It is widely used in preparation process of compounded medication in compounding pharmacies specially when contamination risk is high in the working environment. It is suggested to be used in high or medium risk preparations.

## 5. Working environment

- Indoor use only.
- Environment temperature: 15°C~35°C.
- Relative humidity: ≤75 %.
- Pressure range: 70 kPa~106 kPa.
- Power supply: AC 220 V  $\pm$  10 %, 50 Hz  $\pm$  1 Hz.

## 6. Main technical parameter


Model / Technique parameters	LF-1300 UV	
Device dimensions (LxWxH)	1300x750x1350 mm	
Work Zone Dimensions (LxWxH)	1200x645x610 mm	
Display	LCD display	
Airflow velocity	Average of 0.3~0.5 m/s	
	Main body: Cold-rolled steel with anti- bacteria powder coating	
Material	Work table: 304 stainless steel	
	Side and front windows: 5 mm toughened glass anti-UV	
Pre-filter	Polyester fiber, washable	
HEPA filter	99.999% efficiency at 0.3 um	
Noise	<60 dB	

Model / Technique parameters	LF-1300 UV		
Front window	Motorized		
Max opening	430 mm		
LED lamp	28W x1		
107	30W x1		
UV lamp	Emission of 253.7 nanometers		
Consumption	400W		
Waterproof socket	Two, total load ≤500W		
Power supply	AC220V ±10%, 50/60 Hz;		
Standard accessory	LED lamp, UV lamp x2, base stand, gas tap, waterproof socket x2		
Net weight	200 kg		
Gross weight	228 kg		
Packing Dimensions (LxWxH)	1450x1070x1650 mm		

## 7. Features

Cabinet body is built up of 1.2 mm cold-rolled steel with anti-bacterial powder. Working surface is fully made up of 304 stainless steel which has corrosion resistance performance.

## 8. Unpacking

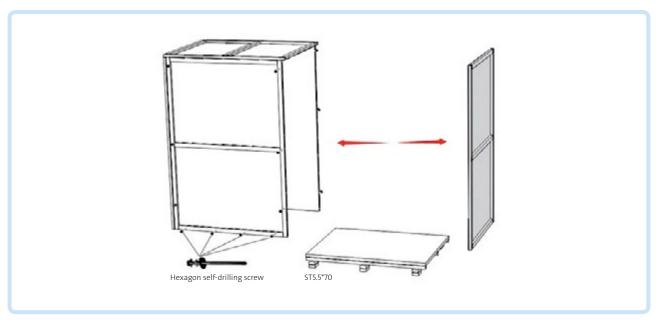


- Please check if packing box is in good condition.
- Choose proper tools for unpacking wooden box. Necessary tools: Electric screwdriver with hexagon driver head M8.
- The picture above demonstrates quick unpacking method. Remove the screws as shown, then remove the wooden box.

## 9. Installation

Laminar flow cabinet shall be normally placed in a protection area. Workspace can not be right opposite to the door or window, and must be away from the outlet of air conditioning. Prevent it from the ventilation system, air conditioning, door, window, and personnel movement. At least 300 mm gap must be kept in the side and back side of the Laminar flow cabinet for clean operating and for inspection.

- Move the entire equipment to the place where it is going to be installed.
- Remove all the packing materials.
- · Check the surface of main body to make sure there is no scratch, deformation or foreign bodies.
- Install the cabinet on to the surface. Additionally, you can use the base stand.
- You can use the Water-Gastap accessory kit. Unscrew the tap and nut, find the Mounting hole on cabinet glass. The water-gas mouth of the tap should be placed inside the cabinet's operating zone. The other end of the tap which is having threading on the pipe should be inserted through the glass hole. The threaded pipe should be fastened with washer and nut outside the glass and need to be tightened carefully with a wrench.
- Install the power cord.
- Turn the power ON.

## 10. Structure

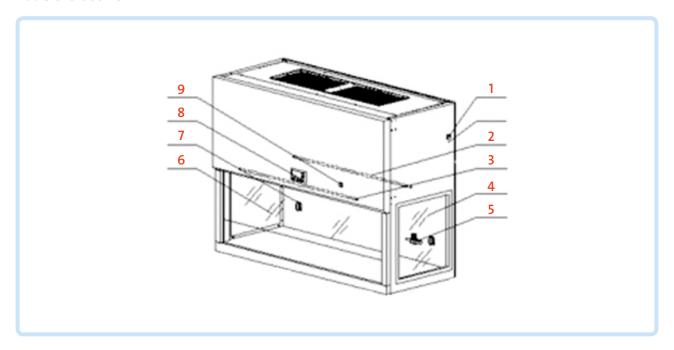

No	Description
1	Power inlet
2	UV lamp
3	LED lamp
4	Side window
5	Water-gas tap

Description
Front window
Waterproof socket
Control panel
Power switch

## **Driving system of front window**

Driving system consists of tubular motor, front window, hauling mechanism and limit switch.

### Air filtration system

Air filtration system is the core system of laminar flow cabinet. It consists of blower and HEPA filter system. The main function of air filtration system is to transfer filtered air to work area, ensure airflow velocity, and keep Class 100 cleanness


### **UV** lamp

The entire work zone could be sterilized effectively by the UV lamp located at the top of work zone. Emission of 253.7 nanometers could ensure the most efficient decontamination.

## Fluorescent light

The laminar flow cabinet is equipped with LED light, which ensures the standard requirement of average illumination is

## 11. Control panel

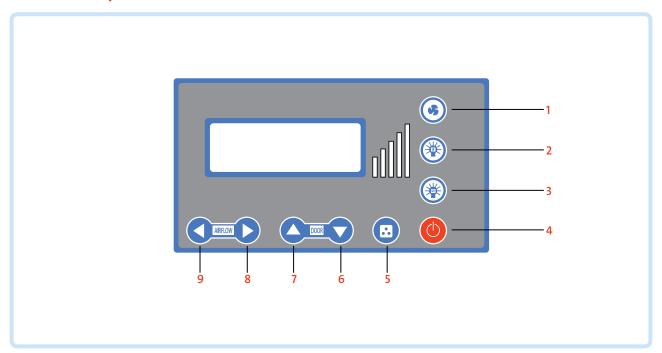

No	Description
1	Blower
2	LED light
3	UV lamp
4	Power switch
5	Socket

No	Description
6	Front window down control
7	Front window up control
8	Air volume decrease
9	Air volume increase

## 12. Display

You can see the working pressure and air speed on the display window. Press button lightly. Now you re able to operate the

- Connect power supply (220 V ± 10 %, 50 Hz), switch on the power switch, the LCD display will glare for three times "#######", "FAN", "0.00M/S", "LIGHT", "UV", "UV TIME :00H00M", "WORK TIME:0000HOURS". Then the system goes into stand-by mode.
- "O" The power button, makes machine switch between suspension mode and working mode.
- "\$" To control blower working status. Blower has memory function that blower can display last time blower gear, to avoid needing to adjust the fan gear each time.

Note: It will not work when front window is fully closed.

- "拳" To control LED lamp. Turn ON/OFF button
- "拳" To control UV lamp. Turn ON/OFF (UV lamp, blower, fluorescent lamp and front window interlock; UV won't work when LED lamp, blower are ON or front window is open).



#### Note:

When the LED lamp is ON the UV lamp cannot be lighted. You have to turn OFF the LED lamp first. When the UV lamp in ON, if you press the LED lamp button the UV turns immediately OFF and the LED lamp is lighted.

- "L" Control socket power status.
- "▼" Press Down button, glass window will start to decline. Each time you press, the buzzer will sound; hold down this key, the glass window will continue to decline; release the button, the glass window will stop declining.
- "A" Press UP button, glass window will start raising up. Each time you press, the buzzer will sound; hold down this key, glass window will continue to rise; release the button, the glass window will stop rising.
- "◄" To control blower speed increase. When blower is working, each time you press, wind speed can increase a gear, and the buzzer rings once. Press this button when you use the UV lamp, UV lamp timer time increases, and the maximum time is 90 minutes, set up time stays in memory.
- "▶" To control blower speed down. When blower is working, each time you press, wind speed can reduce a gear, and the buzzer rings once. Press this button when you use the UV lamp, UV lamp timer time decreases, and the minimum time is 10 minutes, set up time stays in memory.



### Note:

When the front window is fully closed, only the UV lamp and LED lamp could be switched on, fan could not. When front window is open, LED lamp and fan could be switched on, but UV lamp could not.

## **Clock adjustment**

In standby mode, press LED light button continuously for 5 seconds to enter clock setting mode after a buzzer alarm. Minute position is flashing, press UP and DOWN to adjust. Then press the blower button once, switching to hour position and adjust. To save the time, press the light button again continuously for 5 seconds, data will be saved after a buzzer alarm.

## 13. Airflow

A pre filter is used in the air inlet to protect the HEPA filter.



#### Note:

The air inlet should not be blocked, nothing should be placed on the top of the equipment.

### Water proof socket

Waterproof socket is arranged in the operating area, to ensure that can be used safely when needed. Press the socket button from the control panel, access to electricity source plug.



- Please make sure the total power of socket should be ≤ 500W.
- The socket is waterproof only when cover is closed, please make sure to close the cover.

### Fuse protector

The equipment is equipped with main power fuse, which is located near the power inlet.

## 14. Operation instruction

## **Operation notice**

- · Make sure input voltage is correct and stable. The rated load of main power socket should be higher than cabinet consumption. Plug must be well grounded.
- · Moving principles of different compounding materials inside cabinet: When two or more compounding materials need to be moved, be sure that low-polluting move to high-polluting materials. Movement of items should also follow the principles of moving slowly and stably.
- The weight of items placed in the cabinet should not be more than 23Kg/25×25cm<sup>2</sup>.
- · Avoid vibration: avoid using vibration equipment inside the cabinet. The contamination might drop from the HEPA filter thus making the operation area cleanliness lower.
- No flame: An open flame would create turbulence which disrupts the pattern of HEPA-filtered air supplied to the work surface. If sterilization is required during the compounded preparation, infrared sterilizer is highly recommended.
- HEPA filter life: With the usage time increasing, dust and bacteria accumulate within the HEPA filter, filter resistance is getting bigger, when it reaches the maximum point, the speed requirements can't be met. Please contact Fagron for replacement.
- Please do NOT remove or loose the screws of those parts.

**Serious declaration:** No responsibility is taken for risks caused by improper operation!

## **Operation process**

- Connect power supply
- Press relevant function keys (related keys, function and operation please refer to control panel section). Check if the function keys and the operation results are consistent, and according to the above technical parameters table to test whether the blower normal starts and wind speed is up to the standard requirements, LED and UV lamp are working
- The cabinet should be sterilized by UV lamp for at least 30 minutes with the glass window fully closed before any compounded preparation.

- Place the front window at the suitable height and turn on the fan. Make sure the compounding preparation starts after fan working for at least 30 minutes.
- · After finishing the compounded preparation, please clean the working area, fully close the front window and make sure to sterilize the cabinet by UV lamp for 30 minutes before turning off the cabinet



- UV lamp function could only be selected when front window is fully closed.
- · For safety of eyes and skin, people should leave the room during the UV sterilization, or avoid direct eye or skin contact.
- UV lamp should be checked regularly. It should be replaced when either the total working time reaches 1600 hours or the intensity is lower than the requirement.

## 15. Maintenance

- Preparations before maintenance.
- Remove all the items from the working zone.
- Use cotton or towel, concentrated soap, hot water, water, medical alcohol or other disinfectants, etc.

### Clean the cabinet surface

### Clean the surface of working zone

- Wipe the entire surface with a soft cotton cloth which has been soaked with concentrated liquid soap. Afterwards, wipe off the foam with another cotton cloth or towel which has been soaked with clean hot/warm water. At the end, wipe the entire surface with a dry cotton cloth or towel rapidly.
- For the work surface use 70% rubbing alcohol or other disinfectant to wipe.



### Attention:

• Disinfectants used for wiping should not damage the 304 stainless steel.

### Clean the external surface and front window

Use a piece of soft cotton cloth or towel with non-abrasive household cleanser to wipe the surface.

## Overall maintenance period

• The recommended interval period for comprehensive maintenance is either one year or 1000 working hours.

## Daily or weekly maintenance

- Disinfect and clean the working zone.
- Clean the external surface and front window around the working zone.
- Check the various functions of equipment.
- · Record down the maintenance result.

### Monthly maintenance

- Clean external surface and front window.
- Use towel with 70% rubbing alcohol or 1:100 dilution of household bleach (0.05% sodium hypochlorite) to wipe the working table, the inner face of front window and the inner wall surface of the working area (exclude the top wind grid). Use another towel with sterile water to wipe those area to erase the remaining.
- Check the various functions of the cabinet.
- Record down the maintenance result.

### **Annual maintenance**

- Check the two lifting belt of the front window tubular motor, make sure both of them are well connected to the motor with same tightness.
- Check the UV lamp and LED light.
- Apply for overall performance test of the cabinet annually to ensure that the safety meets requirements.
- Record down the maintenance result.



• When doing maintenance, please pay attention to cut off the power, so as to avoid electric shock!

## Common failures and solutions

Please confirm that the power is well connected, the power cord and fuse are in good condition (without any damage).

Failure	Checking parts	Measures	
	LED stand plug	Connect the plug and stand tightly	
Fluorescent lamp fail to work	LED stand	Replace stand	
Fidorescent lamp fail to work	Circuit	Check the circuit	
	Control panel	Replace the control panel	
	Interlock	Check the blower and fluorescent lamp turn off or not	
	Lamp holder	Connect the tube and lamp holder tightly	
UV lamp fail to work	Lamp tube	Replace the lamp tube	
	Ballast	Replace the ballast	
	Circuit	Check the circuit	
	Control panel	Replace the control panel	
		Make sure the power is well connected and the fuse is in good condition	
Button fail to work		Check if the button is broken	
Button fall to work	Control panel	Make sure the connecting wire is well connected	
		Replace the control panel	
	Blower	Replace the blower if it is damaged	
Blower fail to work	Circuit	Check the circuit	
	Control panel	Replace the control panel	

Failure	Checking parts	Measures
	Power supply	Check whether the power supply is well connected
	Power cord	Check whether power cord is in good condition
No electricity in equipment	Fuse	Check whether the fuse is damaged
	Potential transformer	Check whether the transformer works normally
	Control panel	Replace the control panel
	Connection wires	Check connection wires if in good connection
Display fail to work	Display screen	Check whether the screen is in good condition
	Control panel	Replace the control panel


## 16. Notes

- Troubleshooting methods should be done by qualified electricians under safe conditions(cut off power supply). components should not be removed. Risk caused by failing to follow those instructions would be responsible by user.
- · Please contact Fagron technical department if a failure could not be traced or solved. Do NOT repair the equipment without a qualified Technician.
- Troubleshooting and repair of this device only could be undertaken by trained and recognized technicians.

## 17. Content package

Name	Quantity
LF-1300 UV Main body	1
RVV power cord	1
Fuse tube (10A)	1
LED lamp (12 W)	1
UV lamp (T8 30W)	2
User manual	1
Test report	1
Water - gas tap	1

## 18. Circuit diagram

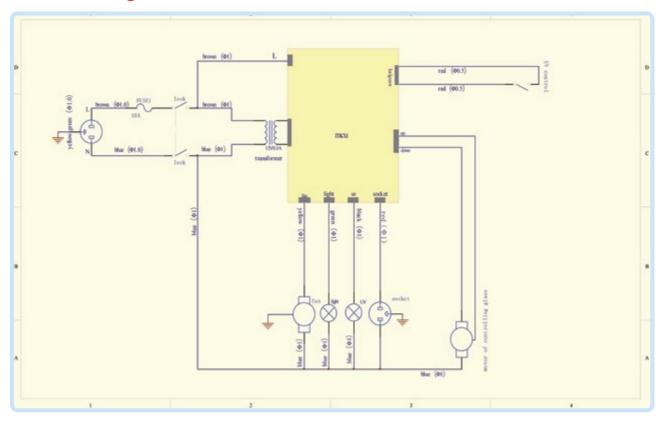

**Together**we create the future
of personalized medicine.



















